
SDX4 FRONT SERVO KIT


STEP 7

This manual shows how to assemble the SDX4 front servo and saddle battery layout.

The following steps replace the ones showed in the SDX4 kit manual.


This layout must be used with the front motor configuration described in the SDX4 kit manual.

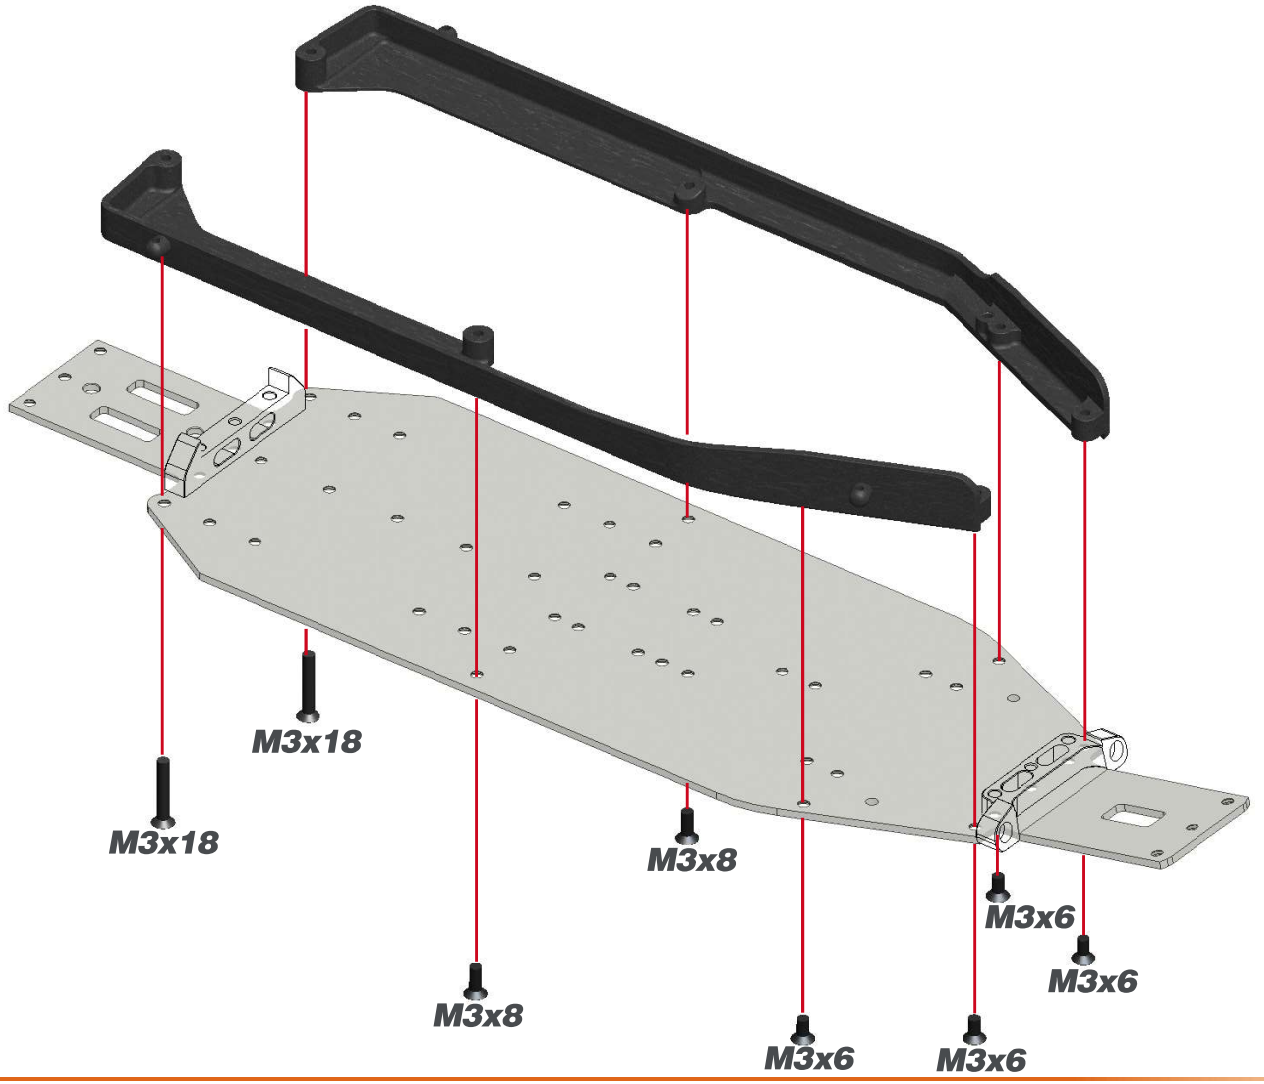




STEP 32

32.1

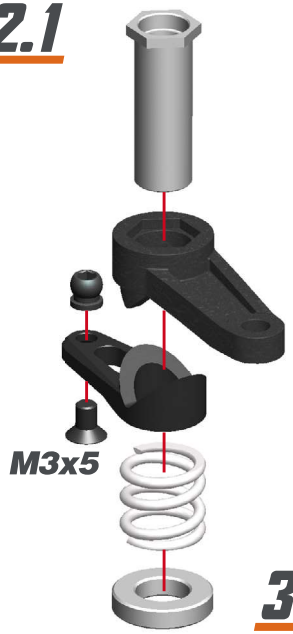


32.2

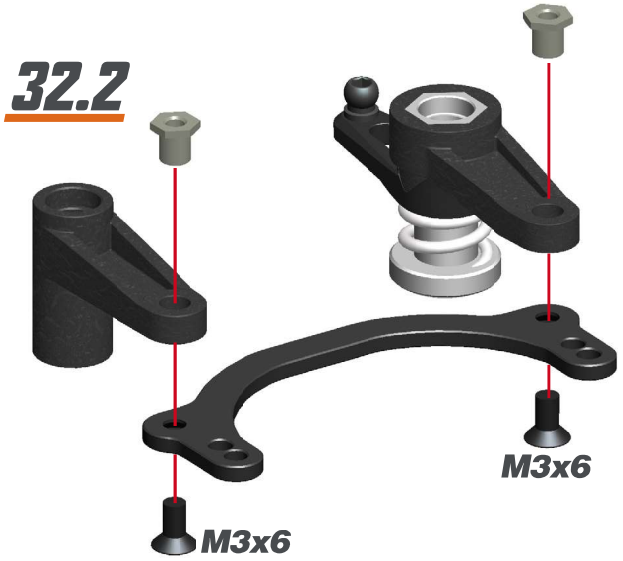

M3x6 M3x6

STEP 36


Check how many teeth your servo spline has (23, 24 or 25) and use the right lever.

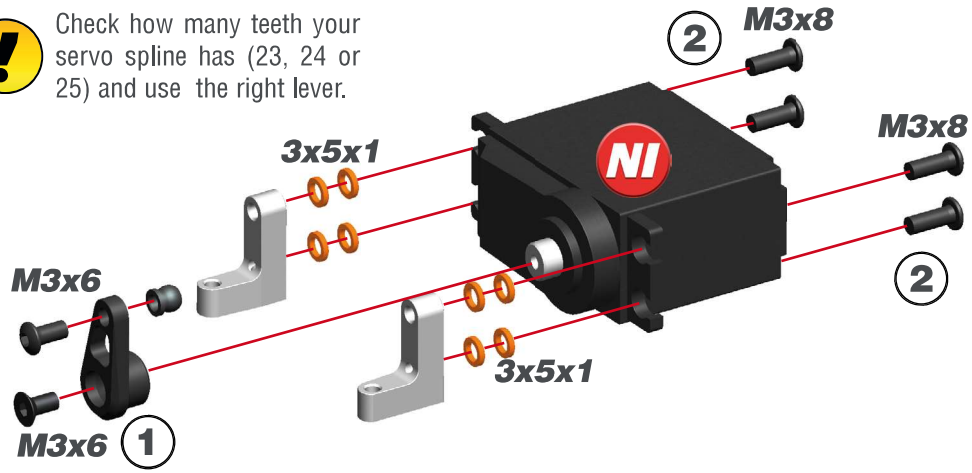

SERVO MOUNTS

The SDX4 kit included two types of servo mounts. Them are not symmetrical and can be used right or left depending in the servo width.


OPTION 1 (WIDE) **OPTION 2 (NARROW)**

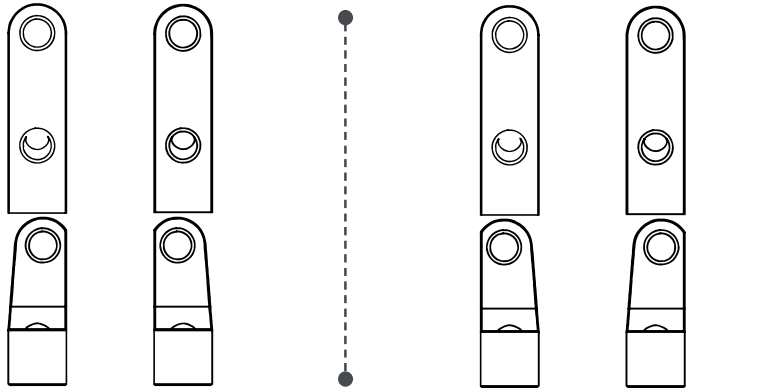

A B


M3x6 M3x6 M3x8 3x5x1

STEP 37

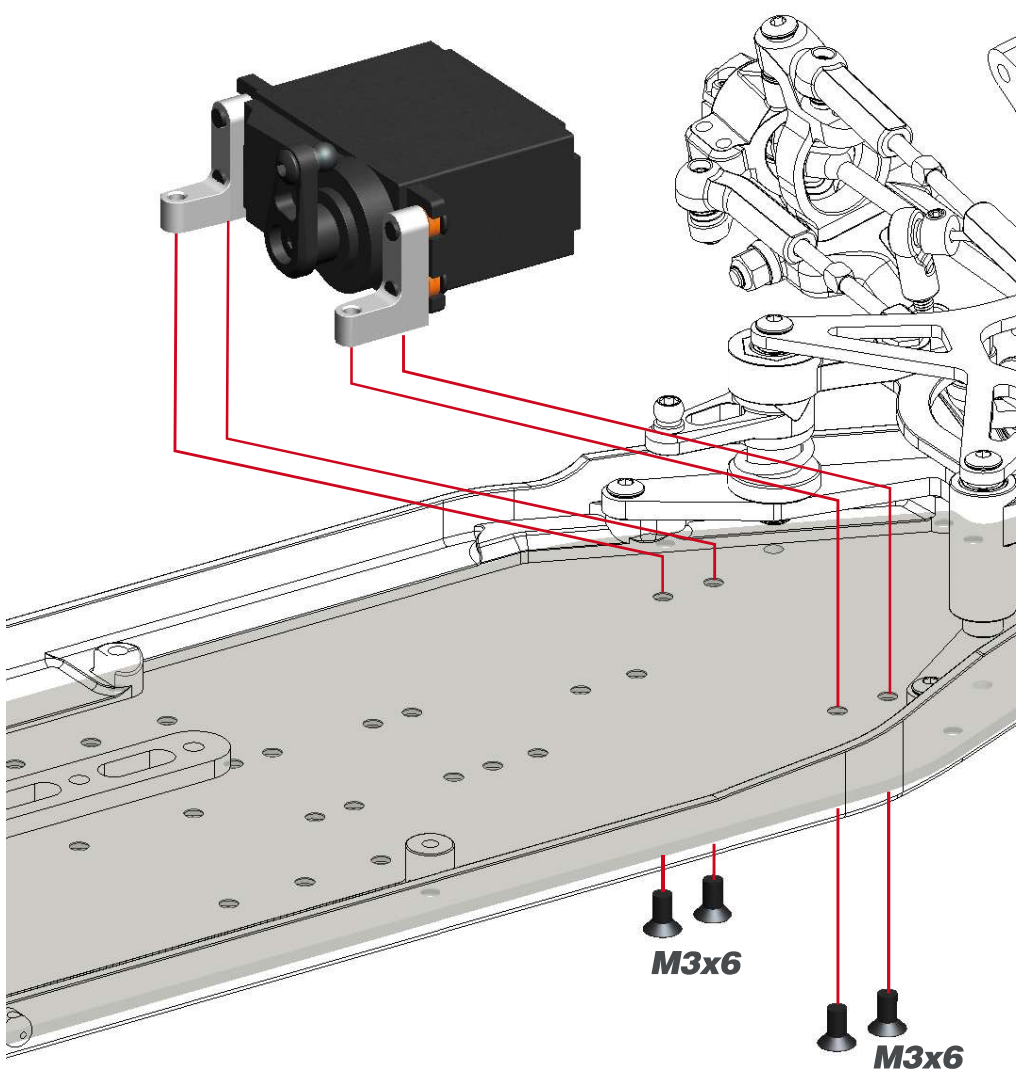

M3x6


STEP 40

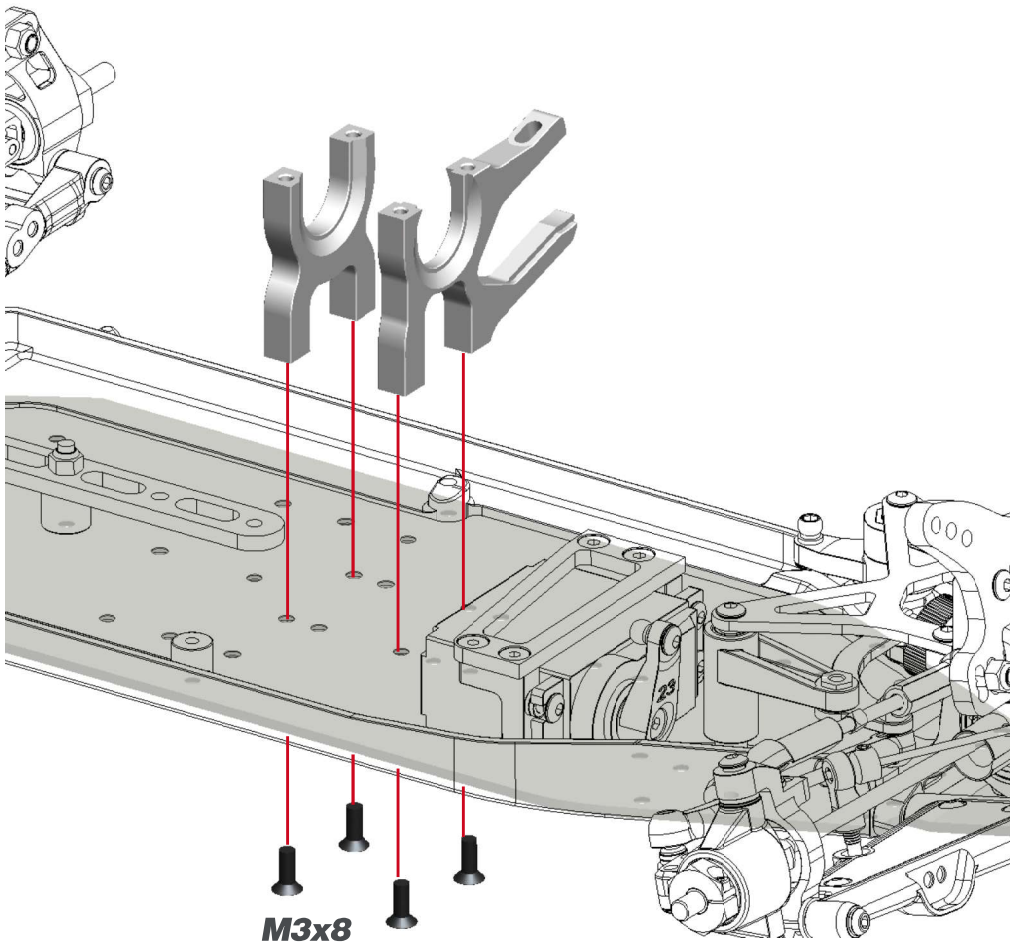


M3x8

STEP 42

42.2

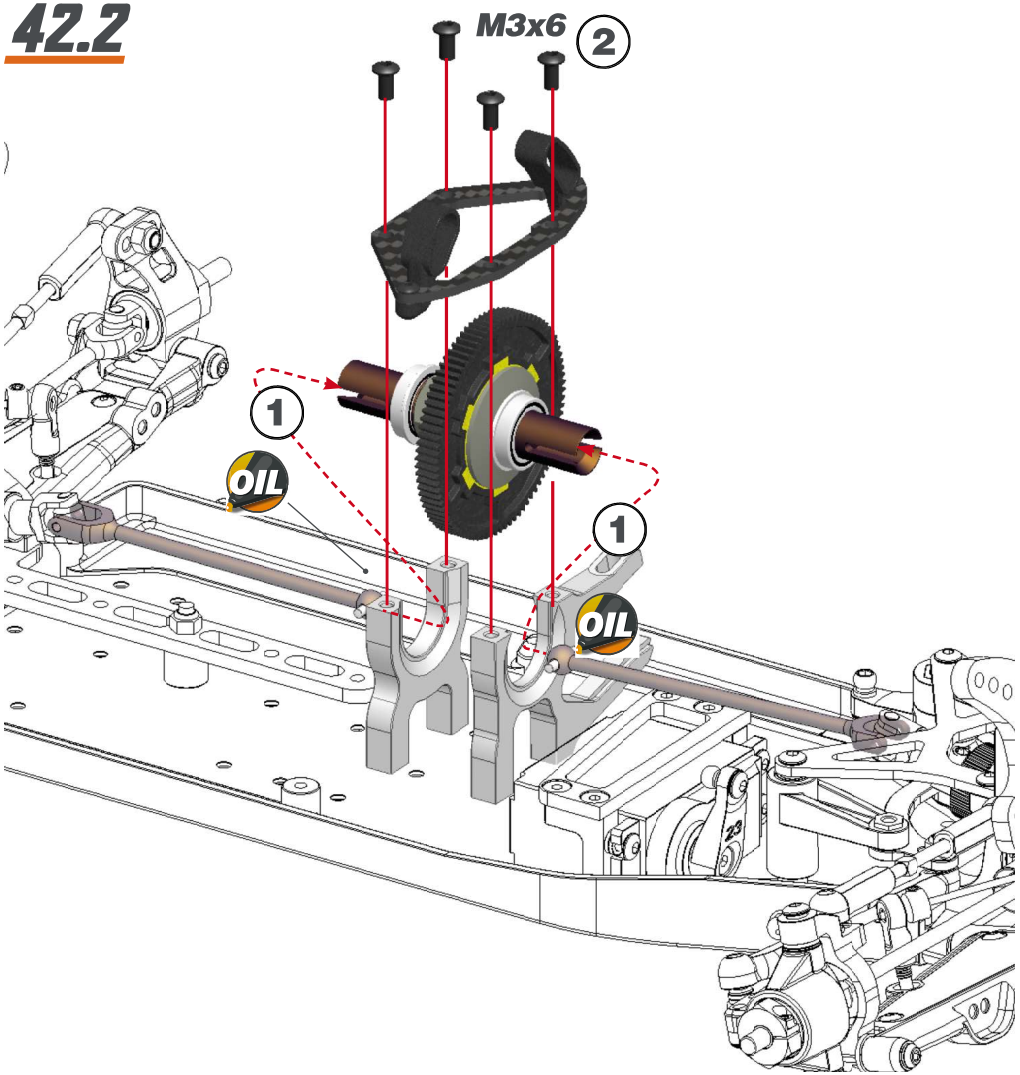




STEP 43

43.1




43.2

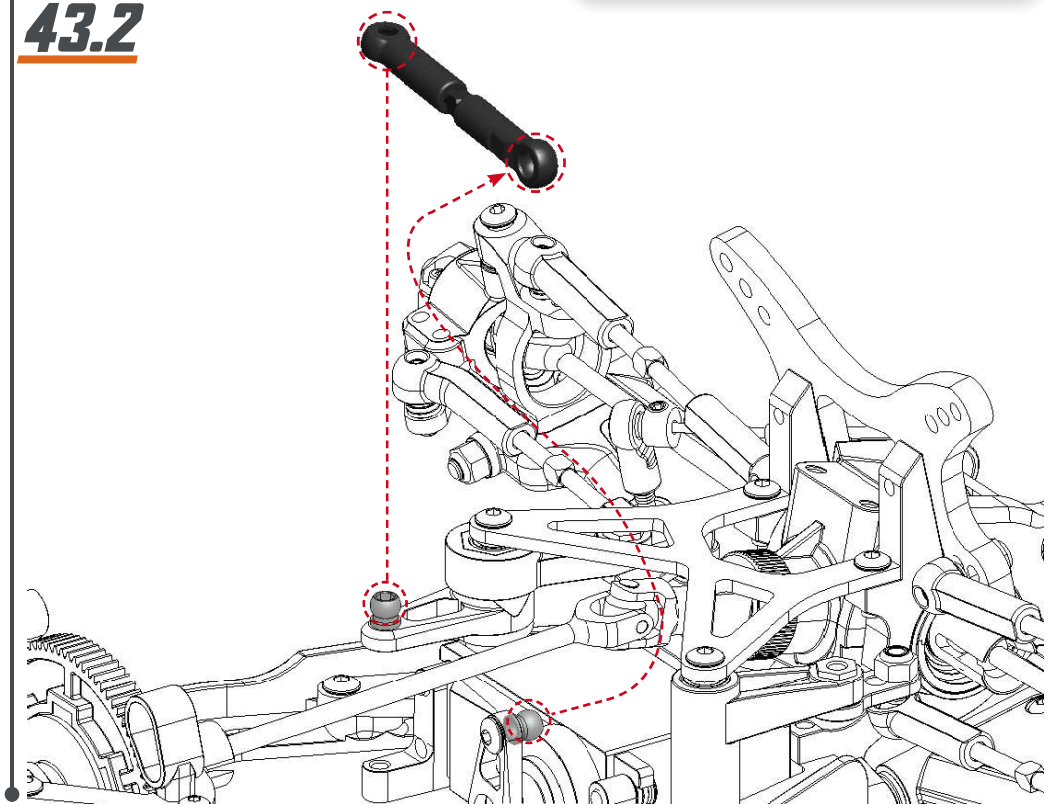

STEP 50

Use double sided tape to mount the ESC and RX to the chassis.

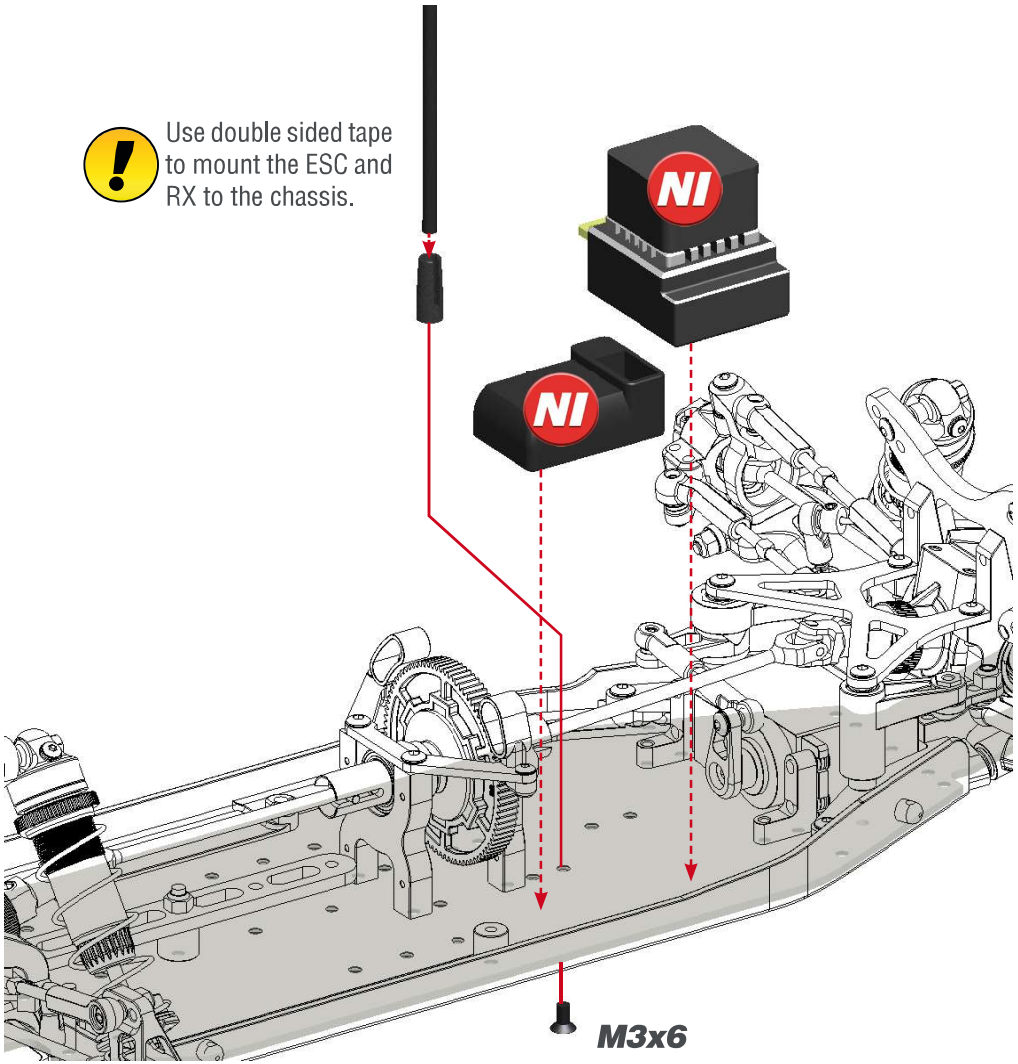


M3x6


STEP 51

51.1


2 Pinion is not included in the kit. Assemble the proper pinion for your set-up.

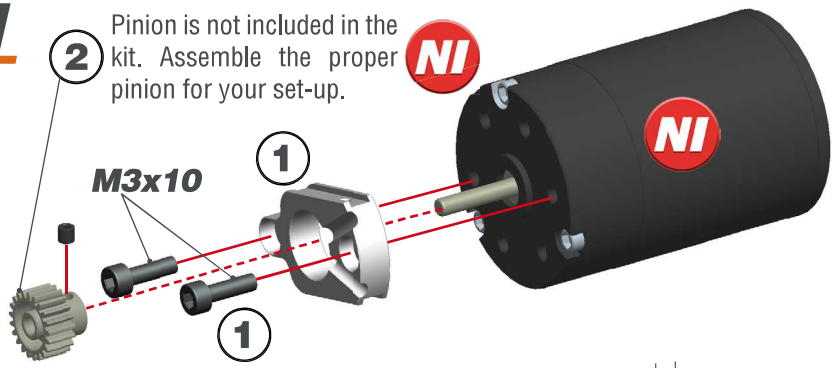



51.2

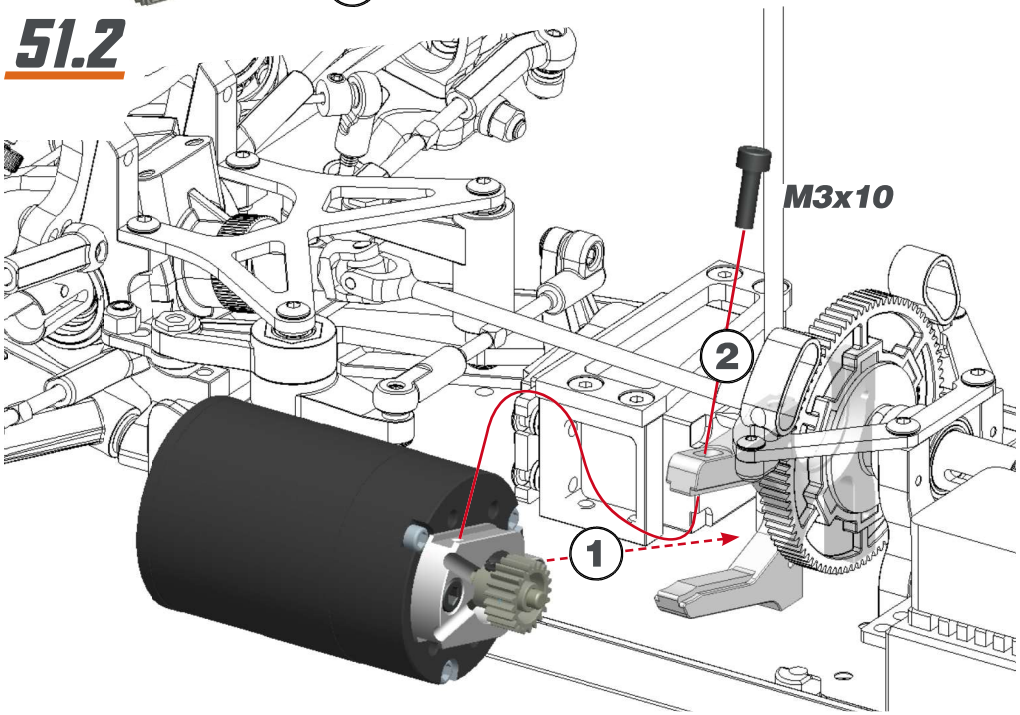

STEP 52

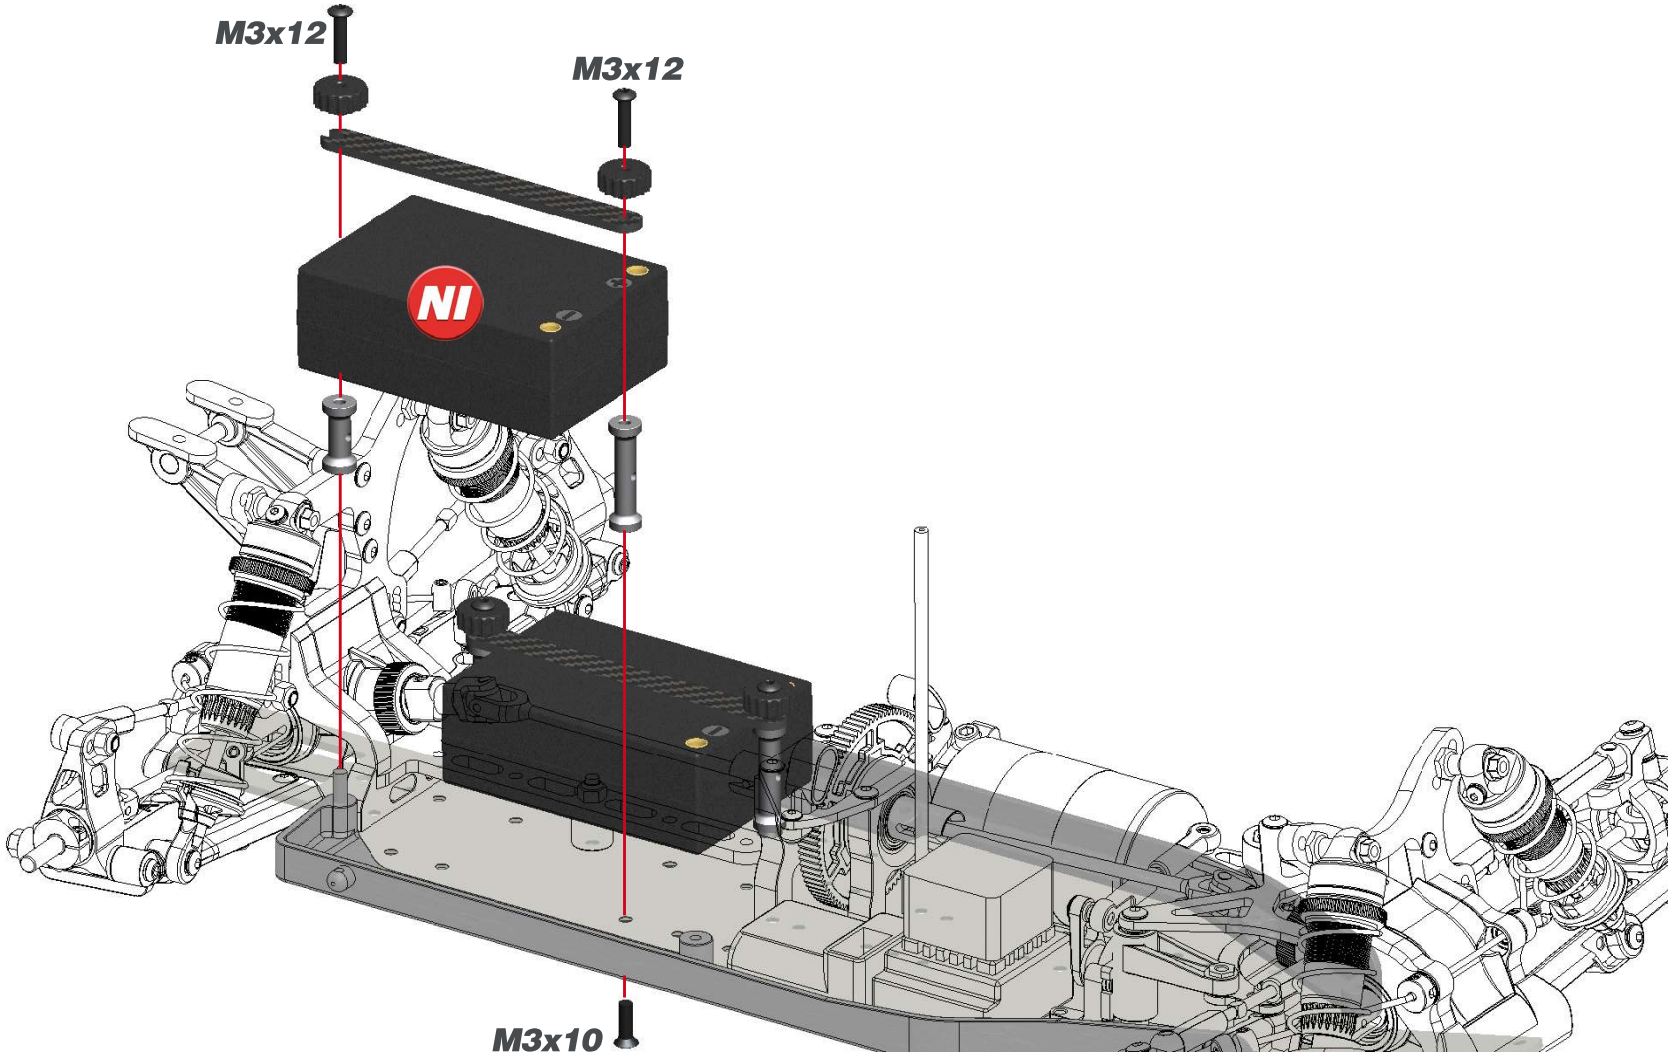


M3x10


M3x12


110112
500360
500630
500435
110112
500360
110159
500593
110100


411206
902138
411206
411253
500629
110108
110157
411253
110122
500638
500639
500640